swiza.com


忌

User's Manual SWIZA Alza Chrono

Congratulations!

Your SWIZA Alza Chrono watch is equipped with a Swiss Made quartz movement. This movement has been meticulously designed and manufactured with the highest quality materials and components to protect it against shock, variations in temperature, water and dust

To ensure that your watch operates with perfect precision, please carefully read and adhere to the instructions included here.

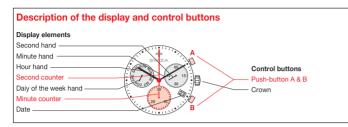

Setting the time

*Pull out the crown to position III (the watch stops)

2 Turn the crown until you reach the correct

*Push the crown back into position I

Please note

*In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 3 must be pushed back into position at the exact second

Setting the date (quick mode)

• Pull out the crown to position II (the watch continues to run)

2 Turn the crown anticlockwise until the correct date 1 appears


Push the crown back into position I

Please note

During the date changing phase between approx. 9:45 PM and 12 PM; the date must be set to the date of the following day.

Setting the date, day of the week and time


Example - Date/time on the watch: 11/ 01:25 / MON - Date/time on the watch: 23 / 20:25 / THU

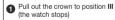


- Turn the crown anticlockwise until yesterday's day of the week WED appears
- 3 Push the cronw to position II
- 4 Turn the crown until yesterday's date appears 22
- *Pull out the crown to position III (the watch stops)
- 6 Turn the crown anticlockwise until the correct date 23 and day of the week THU appears
- **Continue to turn the crown anticlockwise until the correct time 8:35 PM appears
- 8 Push the crown back into position I

Please note

*To set your watch to the exact second, please refer to the chapter entitled «setting the time» **Please observe the AM/PM clock rhythm

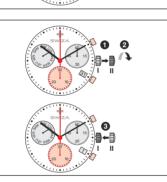

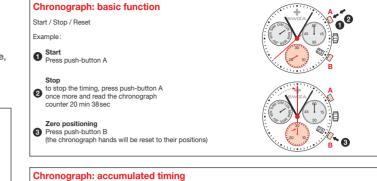

- Example: Start
 start timing
- 2 Stop e.g. 15 min 5 sec following 1
- Restart
 timing is resumed
- *Stop 4 e.g. 5min 12 sec following 3 = 20min 17 sec
- Reset The chronograph hands are returned to their zero positions

Please note

*Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop...)

Chronograph: intermediate or interval timing

- Example:
- Start
 start timing
- Display interval e.g. 20 min 17 sec (timing continues in the background)
- *Making up the measured time the chronograph hands are quickly advanced to the ongoing measured time)
- Stop final time is displayed
- 6 Reset the chronograph hands are returned to their zero position

Please note

*Following 3, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time...)

Adjusting the chronograph hands to zero positon

Example: One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change)

Pull out the crown to position **III** (all chronograph hands are in their correct or incorrect zero position)

Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° – corrective mode is activated)


Adjusting the second counter hand



Adjusting the minute counter hand (position 6h)




Returning the crown to position I Termination of the chronograph hands adjustment (cab be carried out at any time)

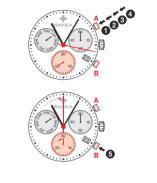





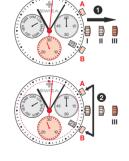





CE Battery type: 395 (Ø 9.5 mm x 2.6 mm / SR 927 SW) Accuracy: +20 / -10 seconds per month





ī

8

03/2015 X